

## **Storage bench 1200**

*Universal*



Installation manual

## General information

**IMPORTANT** *Always make sure all connections are tight and secure before driving and occasionally check the fittings in particular when going off-road.*

**TIP** Clean the powder coated surfaces by using a mild soap, try to avoid any aggressive detergents.

**NOTICE** The installation can involve working with electricity, water or gas. Please make sure you are competent or contact a professional.

### BOLT KIT



**10x** 5x20mm screw

### Required tools

4mm drill  
Screwdriver torx

# General information

Options

## **Sunbrella upholstery**


Colour Sand

## **Swivel table**


Lagun swivel mount

Bamboe table top

# Placement

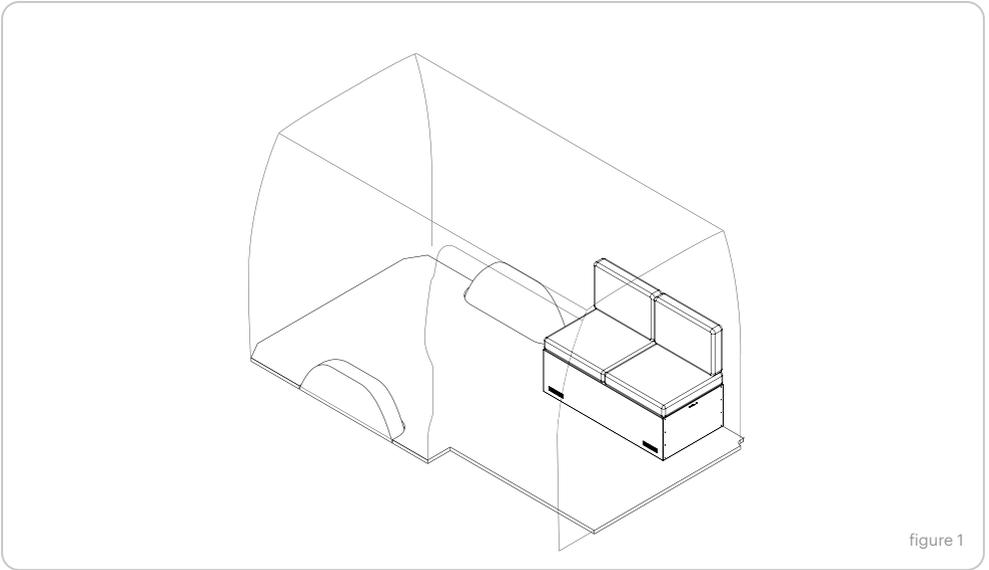


Universal option

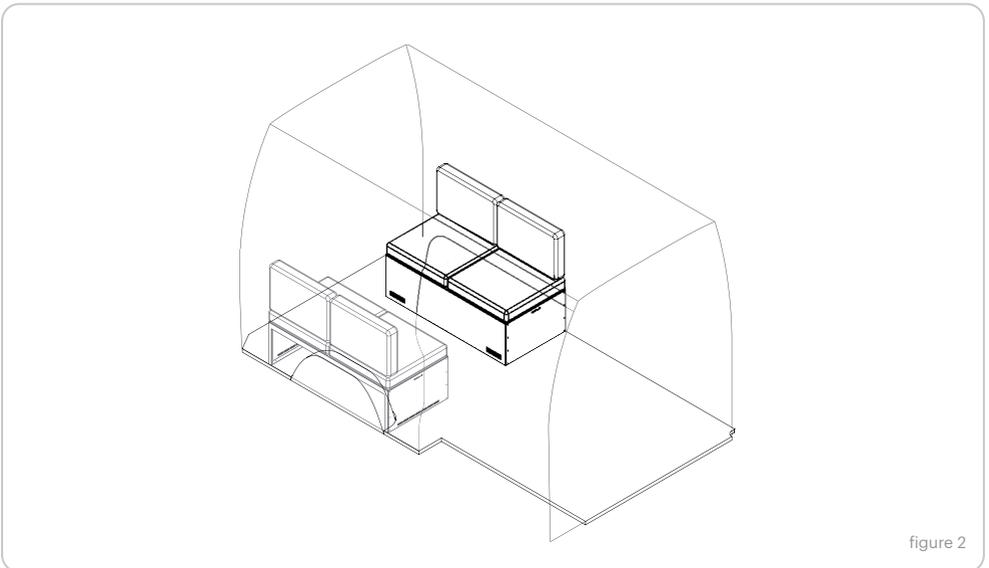

Only available for MB Sprinter

# Installation

## Floor attachment

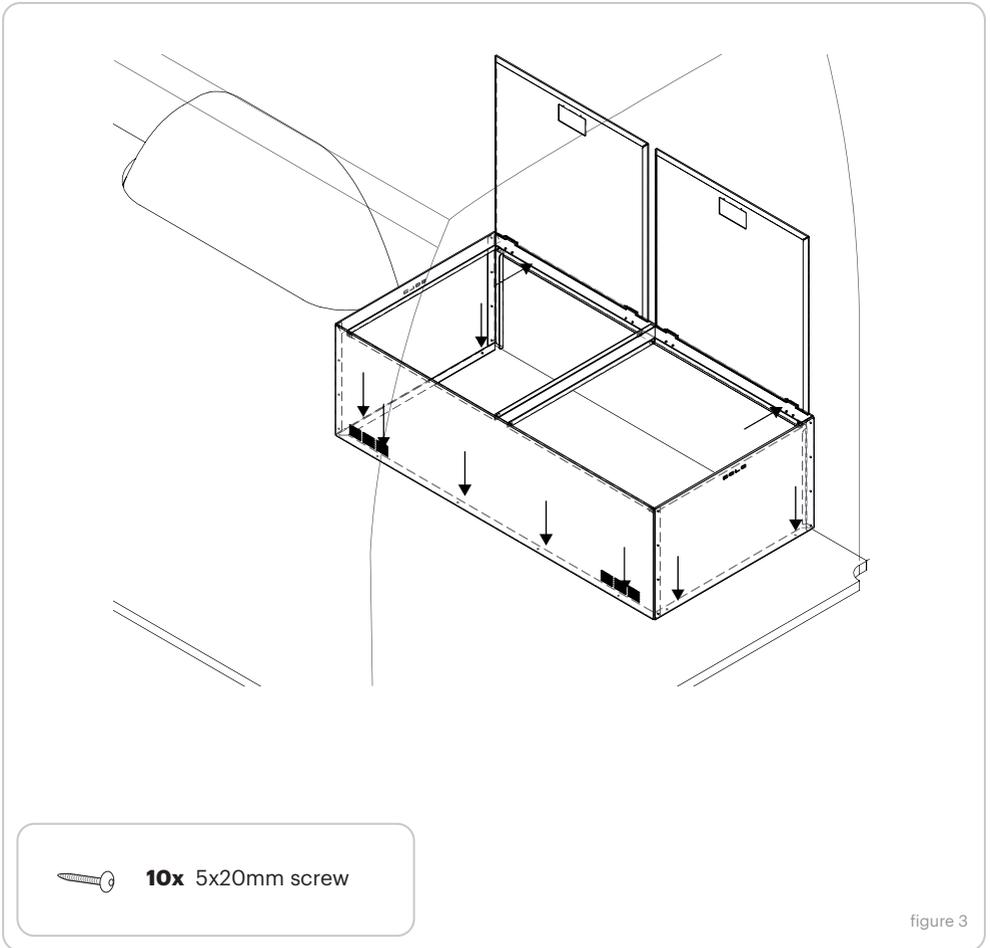

**1.** Determine the exact location and fixate the bench to the floor by the included stainless screws. Mind to check if your floor thickness allows enough depth prevent any holes though the steel flooring. Additionally ad screws to the backside for extra support.

# Installation

## *Upholstery*

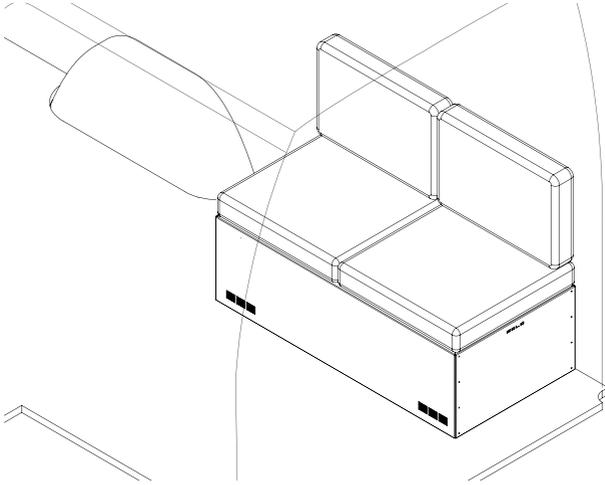


figure 4

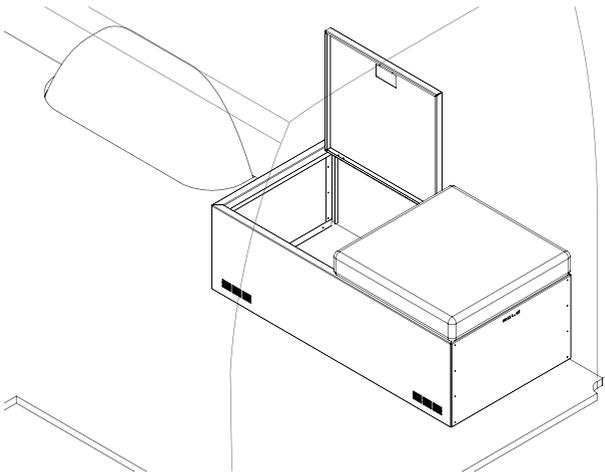


figure 5

**2.** The optional upholstery set can be placed on top of the bench to create a comfortable seating. Access the inside by opening either side of the top lids.

# Installation

## Swivel table

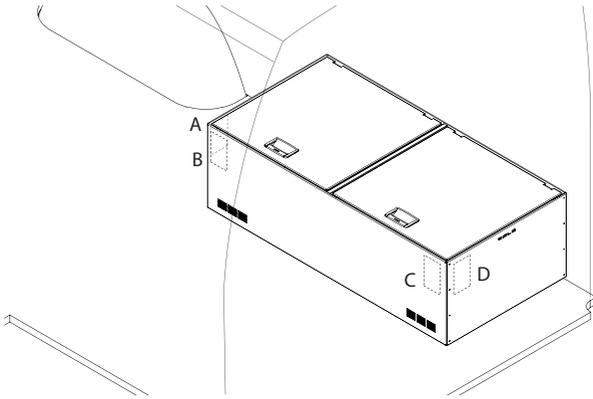


figure 6

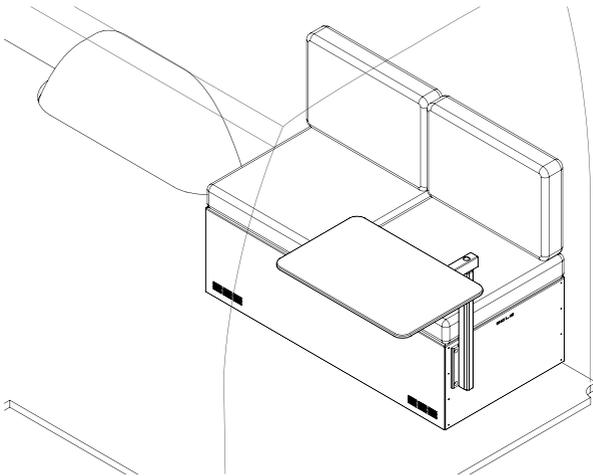


figure 7

**3.** To add a swivel table to the bench we recommend to use 1 of the 4 indicated locations fig 6. The corners are the strongest constructional location and this minimizes any potential wobbles when using a swivel table.

