

## **Wheel well storage box**

*Universal / Mercedes sprinter / VW crafter*



Installation manual

# General information

**IMPORTANT:** Always make sure all connections are tight and secure before driving and occasionally check the fittings in particular when going off-road.

**TIP:** Clean the powdercoated surfaces by using a mild soap, try to avoid any aggressive detergents.

**NOTICE:** The installation can involve working with electricity, water or gas. Please make sure you are competent or contact a professional.

## BOLT KIT



**10x** 5x20mm screw

## Required tools

SREWDRIVER

3/4mm drill

# Placement

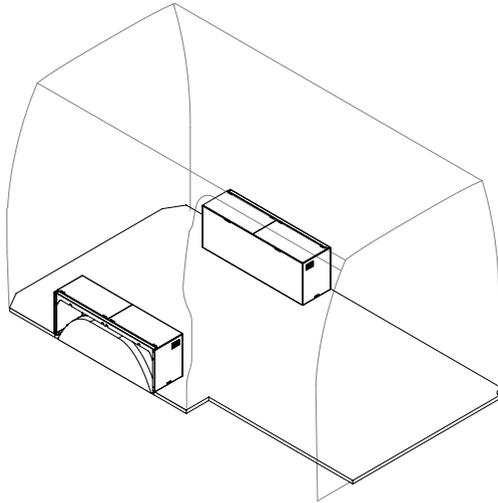


figure 1

144" / L2


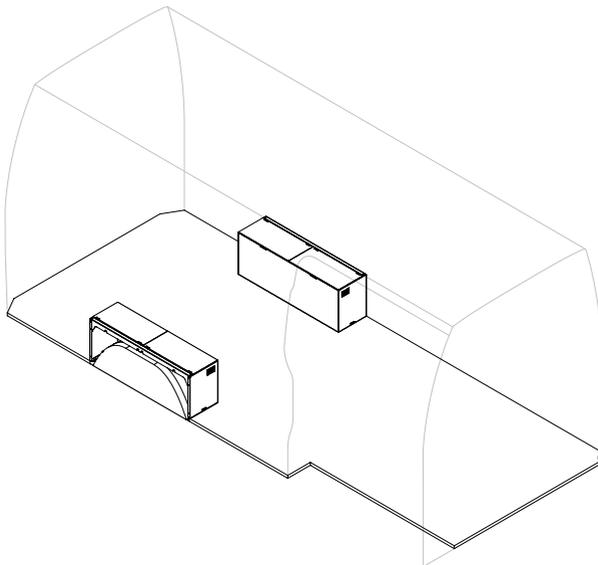



figure 2

170" / L3+L4

# Installation

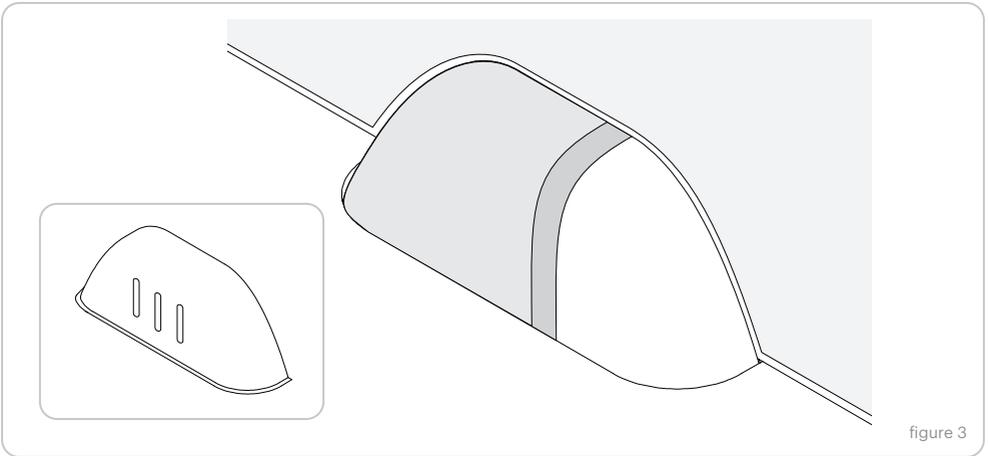

**1.** The wheelwells transmit exterior noises and can be a weak thermal link. It is recommended to insulate them, either sound, thermal or both. Optionally it can be carpeted or finished by a (OEM) hardcase cover.

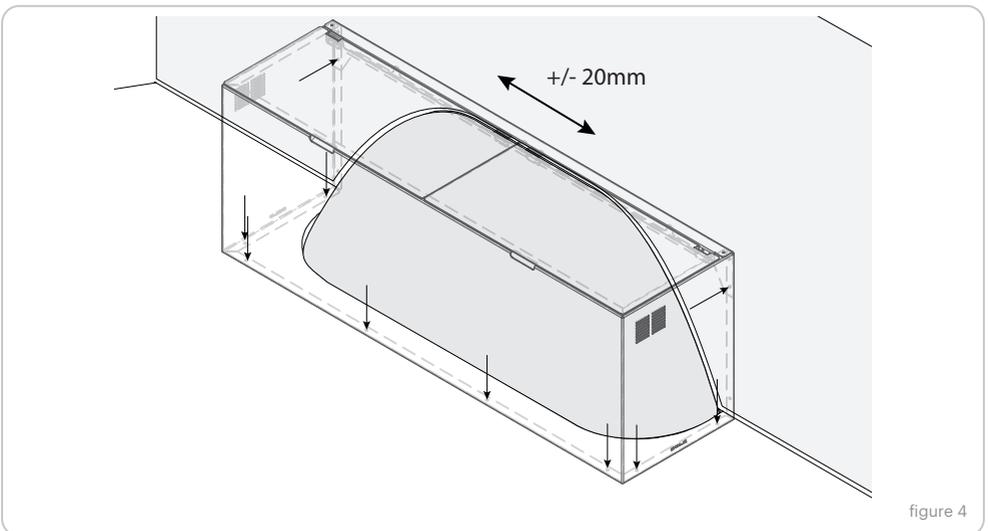

**2.** Position the box over the wheel well and check for any irregularities. Secure the cabinet in place by drilling and screwing the 10 marked locations from the inside (fig 4).