

Gas locker

Wheel well cabinet PASSENGER / universal



Installation manual

General information

IMPORTANT Always make sure all connections are tight and secure before driving and occasionally check the fittings in particular when going off-road.

TIP Clean the powder coated surfaces by using a mild soap, try to avoid any aggressive detergents.

NOTICE The installation can involve working with electricity, water or gas. Please make sure you are competent or contact a professional.

REGULATIONS

NEN -EN-ISO-10239

FITS

Campingaz 907

Campingaz 902

Required tools

☒ | T15 + T20

☒ | Drilling machine

BOLT KIT



6x 5x20mm screw



6x M5x12mm ring



2x 4x20mm screw



2x screw cap black

ACCESSORIES




2x 150cm strap

General information


Options

A

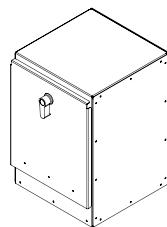

Universal

B

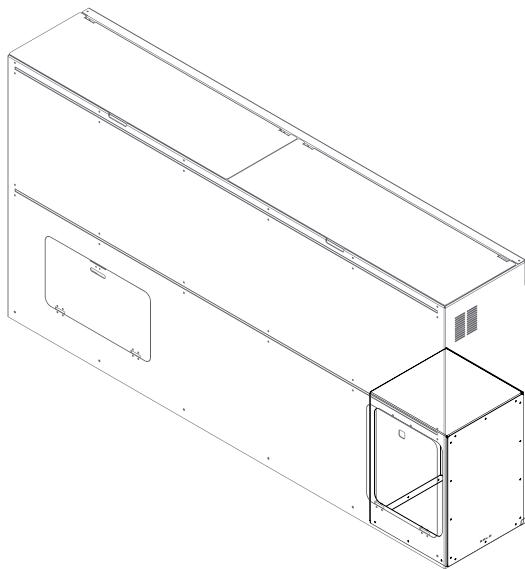

Wheel well cabinet

Placement

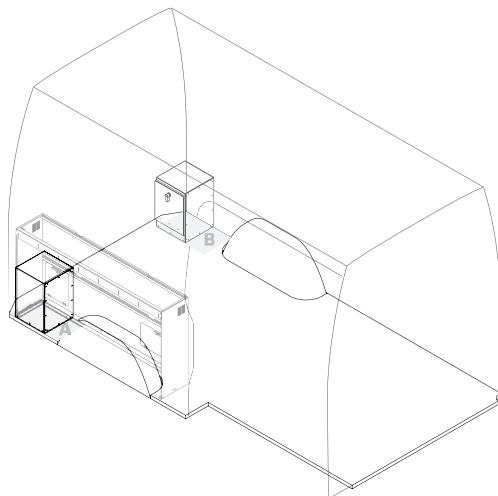


figure 1

MB Sprinter **L1/L2** (2006+) / VW Crafter **L1/L2** (2006-2018) | VW Crafter/MAN GTE **L3** (2018+)


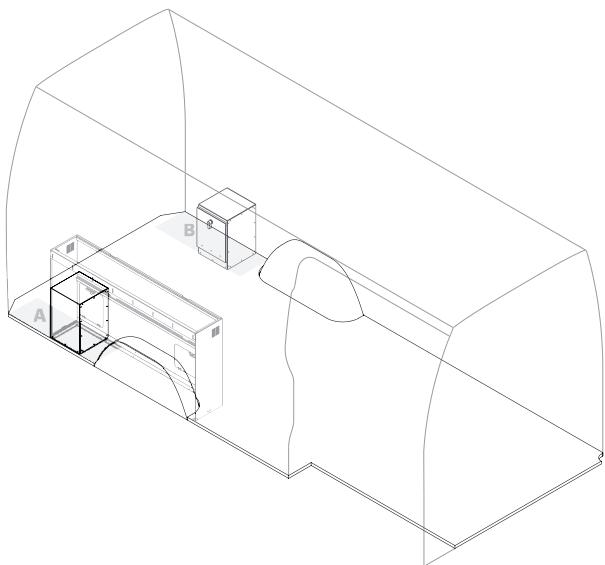


figure 2

MB Sprinter **L3/L4** (2006+) / VW Crafter **L3/L4** (2006-2018) | VW Crafter/MAN GTE **L4** (2018+)

Installation

Universal

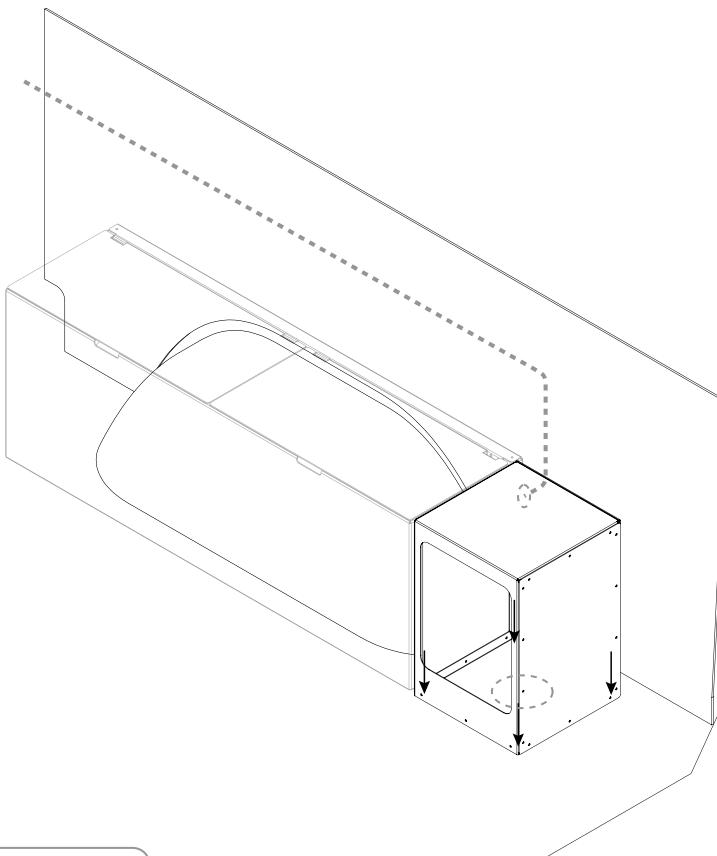

4x M5x12 screw



4x rubber washer

figure 3

1. We recommend to locate the gas locker where it will be conveniently accessible. It can be placed next to the **STORAGE BOX** since it has the same width. Screw on its position by the 4 screws and washers as indicated. Connect your gas hose by drilling a hole and use a bulkhead connector. Your local regulations might require a ventilated hole in the bottom. If so you can use a hole saw to drill your preferred size.

Installation A

Universal


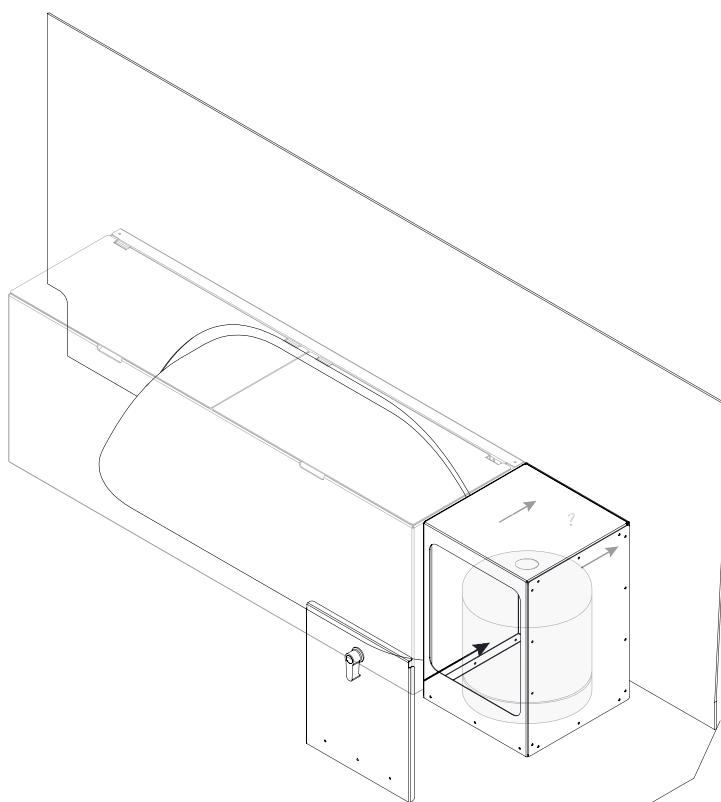


figure 4

2. The gas locker can be closed off by the included lid. No additional drilling is necessary required, but might be added to add an extra layer of structural support.

Installation B

Wheel well cabinet PASSENGER

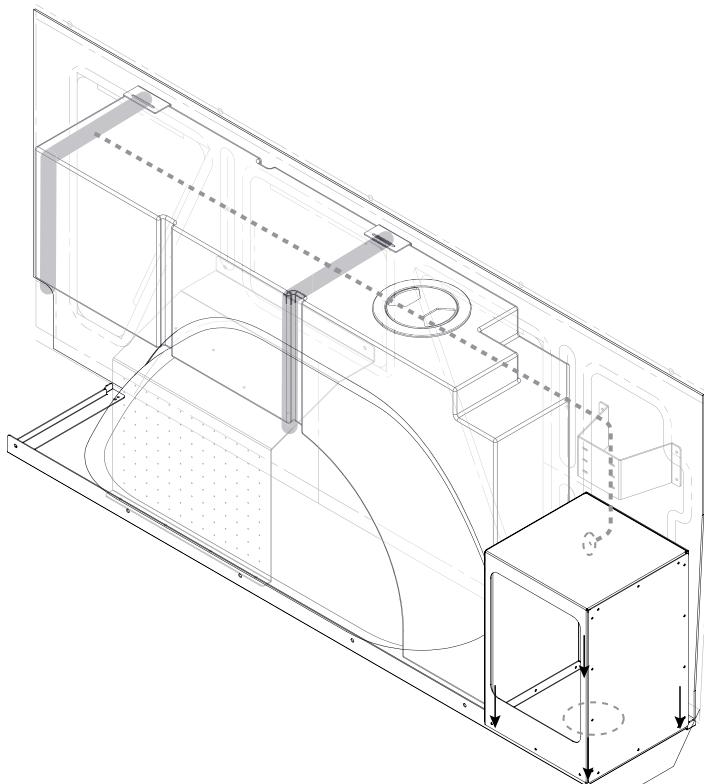

4x M5x12 screw




4x rubber washer

figure 6

1. Locate the gas locker in the most far right corner of the wheel cabinet floor strip. There are pre made holes that mark the exact location. Screw onto its position by the 4 screws and washers. Connect your gas hose to the gas locker by drilling a hole and use a bulkhead connector. Your local regulations might require a ventilated hole in the bottom. If so you can use a hole saw to drill your preferred size.

Installation B

Wheel well cabinet PASSENGER

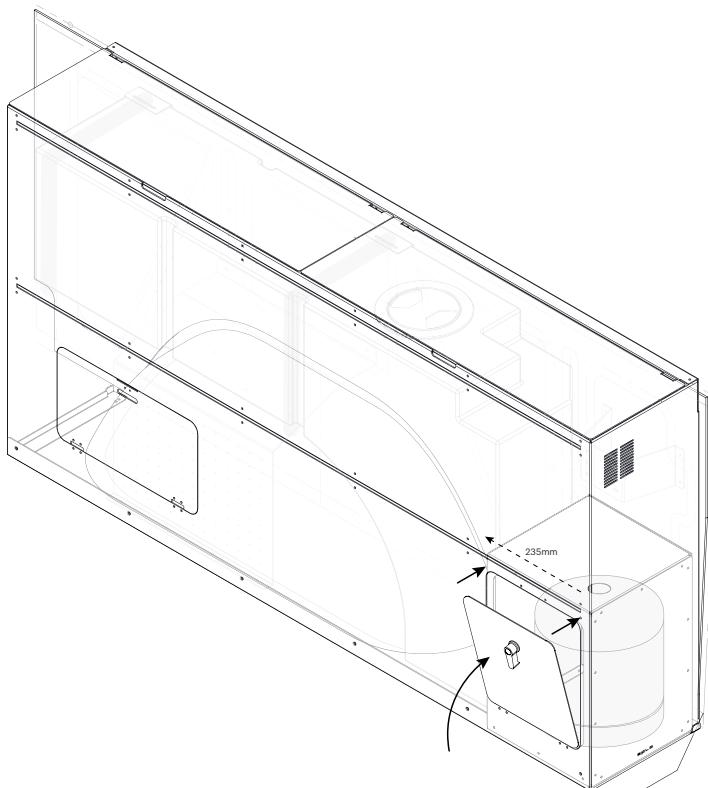

 **2x** 4x20 screw

 **4x** screw cap

figure 7

2. The gas locker can be closed off by the lid of the wheel well cabinet. 2 additional screws might be required to make sure the rubber seals properly. Drill in the top corners to fixate.