

Luggage carrier top

Mercedes sprinter W906/W907/W910



Installation manual

General information

IMPORTANT Always make sure all connections are tight and secure before driving and occasionally check the fittings in particular when going off-road.

NOTICE Always make sure there is enough space in the interior for any accessories mounted to the plates.

TIP Clean the powder coated surfaces by using a mild soap, try to avoid any aggressive detergents.

BOLT KIT



19x M5 rivet nut



19x M5x40 bolt



19x 15mm PVC tube



19x M5 cap black

Required tools



1 HEX 3mm



1 Rivet tool

Installation

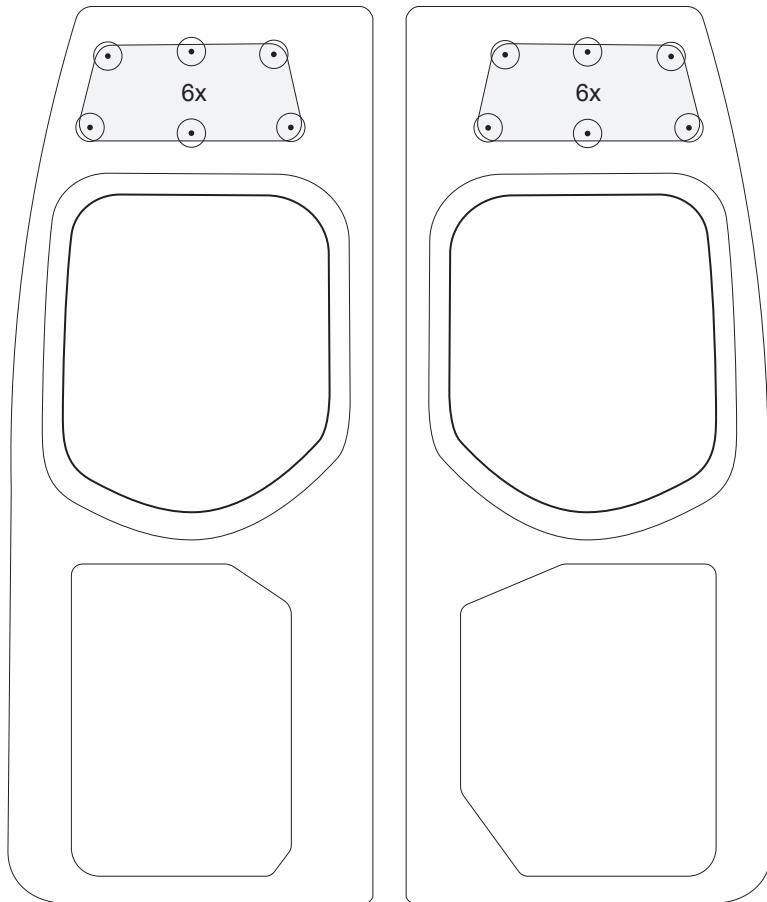


figure 1

1. Remove any interior panels on both back doors to expose the factory holes. The storage panels will be mounted on these positions.

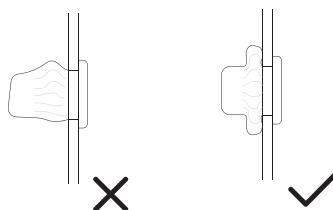


figure 2

2. Install the rivet nuts on the indicated locations

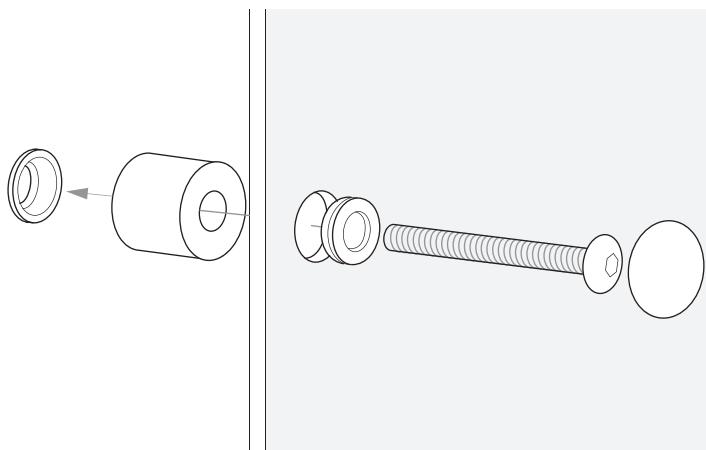


figure 3

3. Mount the luggage carrier plate by placing the tube in between the rivet nut and the plate. Finish the bolt head with the included black cap. You can place back the original interior cover in between the rivet nut and tube or reproduce one by coping the measurements of the luggage carrier.